

"RFIP-R7" Data Dictionary Install on Trimble Geo XH Data Logger


This document will provide direction for installing the "**RFIP-R7**" data dictionary on the Geo XH data logger and then delete the previous data dictionary. Followed by steps that will explain how to enable the "**Repeat**" and "**LOG LATER**" functions.

Step 1

Copy the new RFIP-R7 data dictionary file "**RFIP-R7**" data dictionary to the office computer in the following directory:


C:\AAWork\PFDATA\RFIP

as shown in this screen.

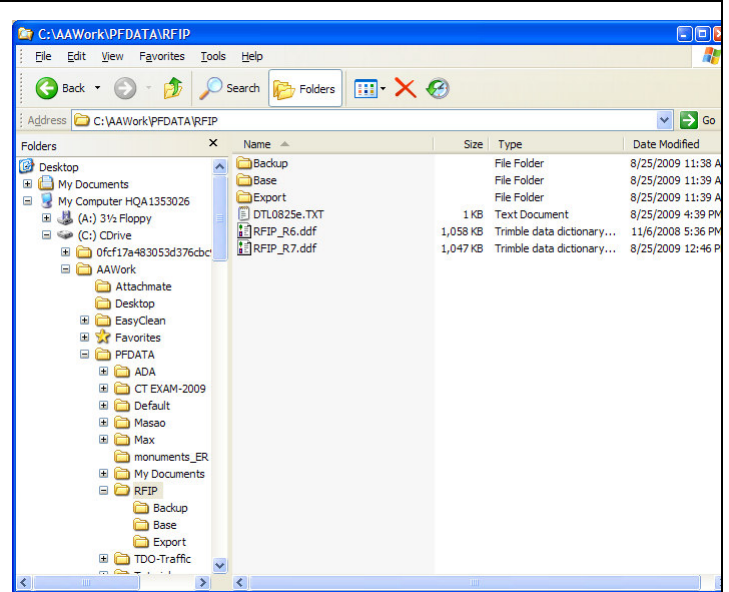

Step 2

Connect your data logger to the office PC via ActiveSync.

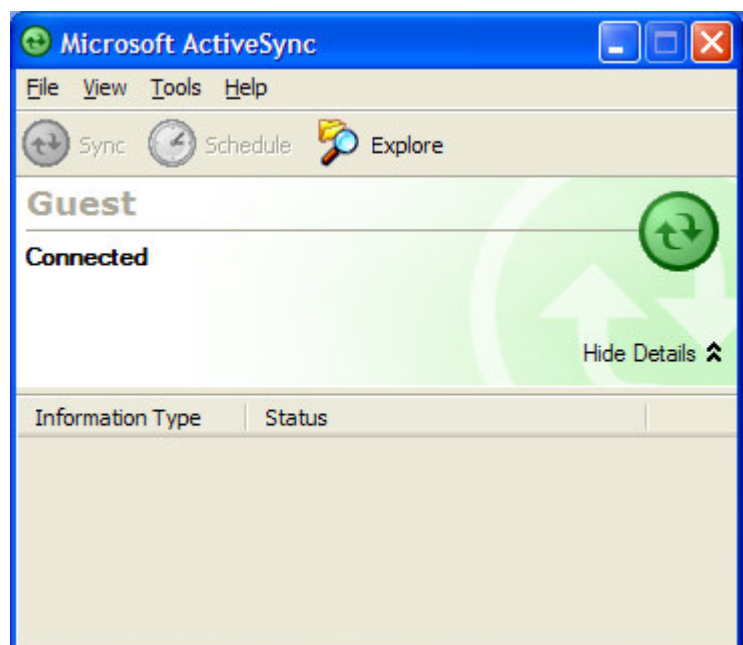


Step 3

Open Trimble's Pathfinder Office

Select the **RFIP** project from the "**Select Project**" dialog box.

Click on "**OK**".

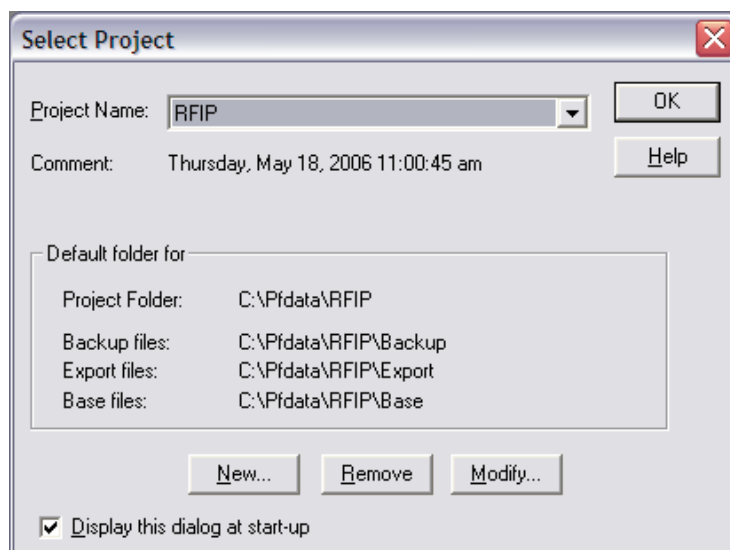


Step 4

From the main Trimble Pathfinder Office menu system, select "**Utilities**"

From the drop-down list, select "**Data Transfer**"

This screen will appear:

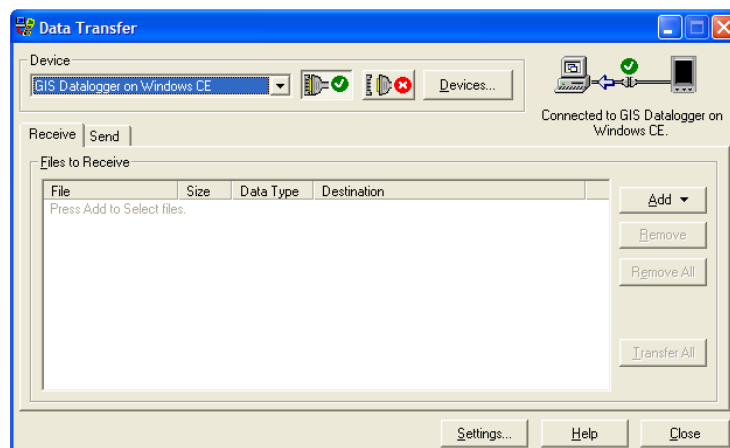


Step 5

Click on the "**Send**" tab


Next, click on the **Add** tab, and select

"**Data Dictionary**" from the drop-down list.

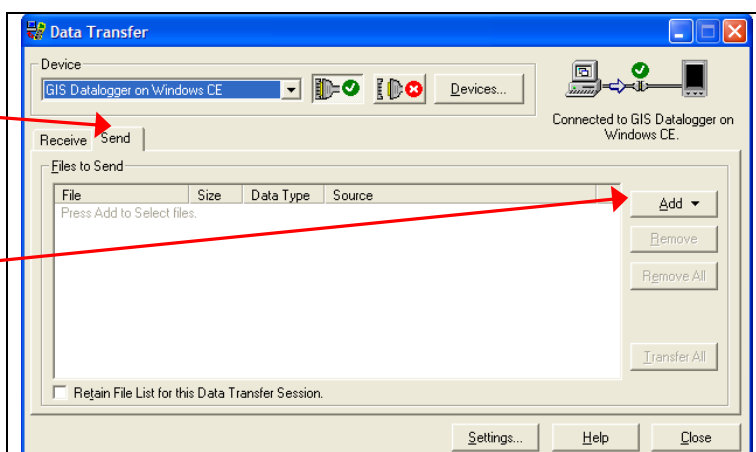

Step 6

The **Open** dialog box will appear:

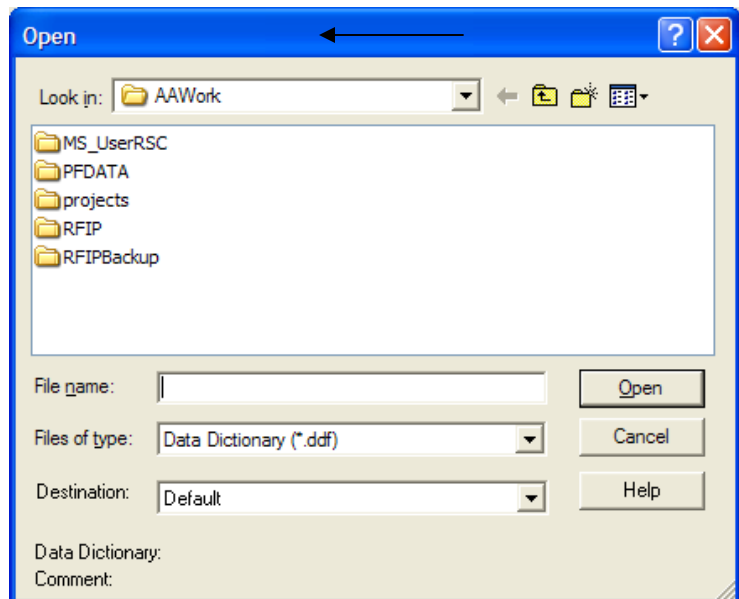


Step 7

Navigate to the folder where the new data dictionary is stored:

C:\AAWork\PFDATA\RFIP


The file should appear as shown here.

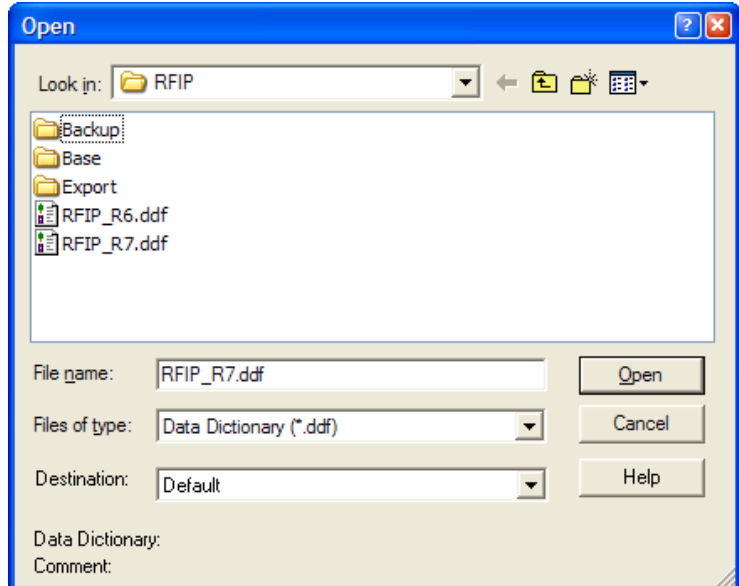

Step 8


Highlight the **RFIP-R7** data dictionary:

Click: **Open** tab

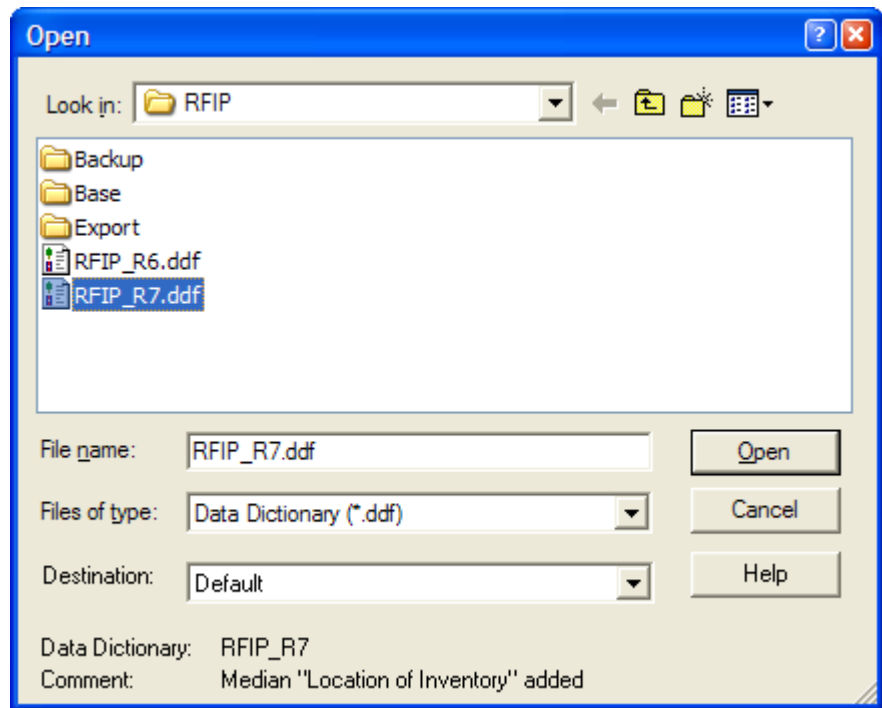


Step 9

Click: **Transfer All** Tab.

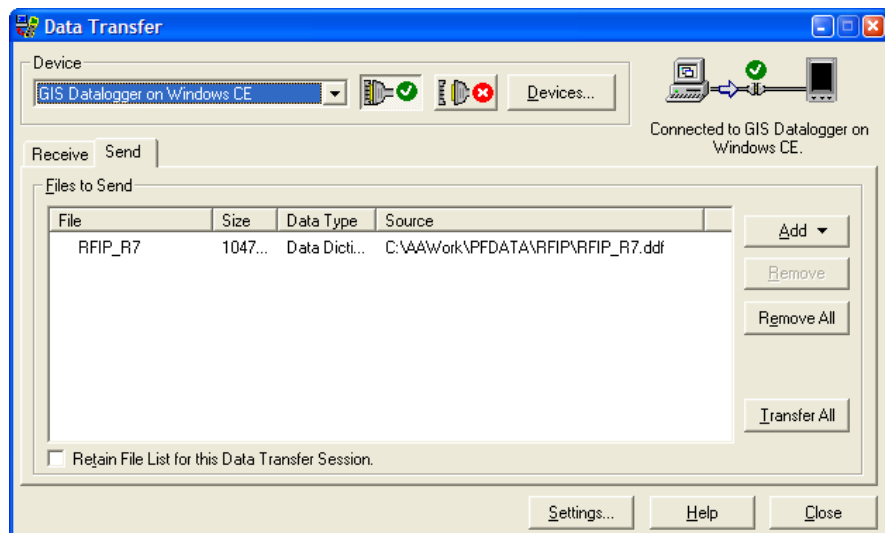


Step 10

While the file is being sent, you will see this message box.

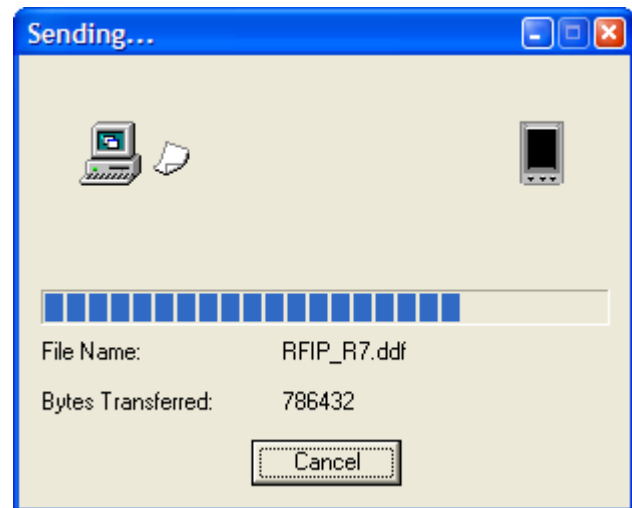


Step 11

Click on "**Close**" in this "Transfer Completed" dialog box.

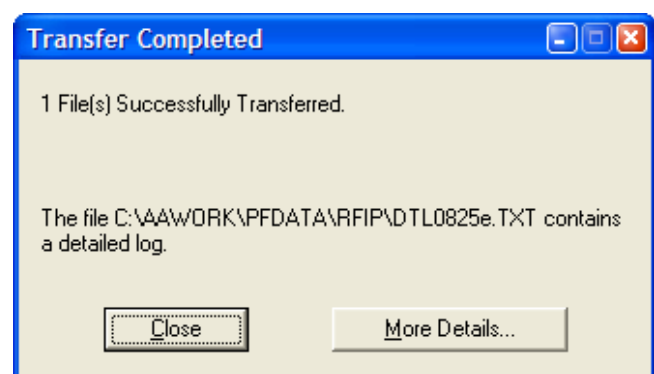

Step 12

Next, open "**TerraSync**" on the Geo XH Data Logger.

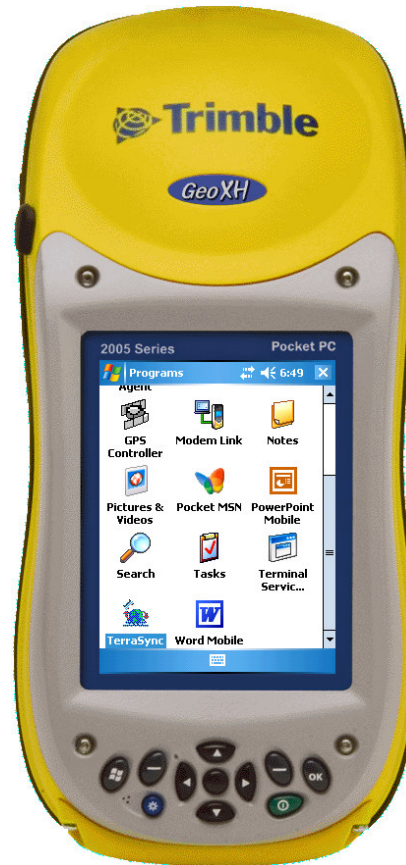

Step 13

Go to the "**Data**" section.



Step 14

Go to the "**Dictionary Name**" drop-down arrow, click and select: **RFIP-R7** data dictionary.



Step 15

Next, delete the **RFIP-R6** data dictionary from the data logger.

From the "**Data**" section, click on the sub-menu drop-down arrow, then select "**File Manager**" from the menu.



Step 16

From the field **"Choose File Type"** open the pull down menu called **"Dictionaries"**




Step 17

Highlight "RFIP-R6" dictionary.



Step 18

Click: “**Options**” button and select “**Delete**”.

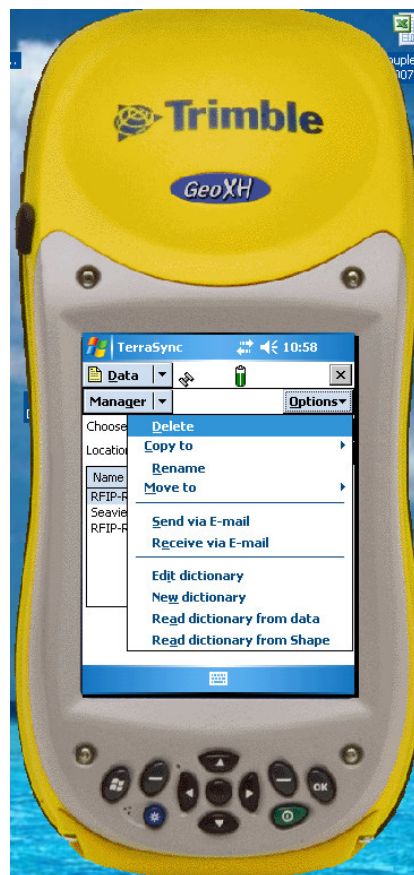

Step 19


Enable “Terra Sync” software “**Repeat**” function” and the “**Log Later**” function for data collection.

Create a new data file in TerraSync, , select the “Options” tab, then from the drop-down list click on the **REPEAT** function and the **LOG LATER** function.



Step 20

Click on the "options" button again to make sure the **"Repeat"** button has a check mark next to it and the **"Log Later"** option has a bullet next to it.

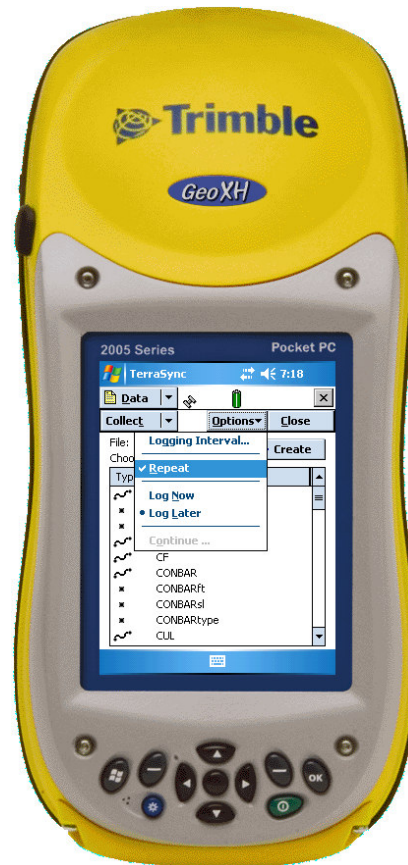

These 20 steps have:

- Transferred RFIP-R7 data dictionary file (.ddf) to your workstation computer
- Transferred the .ddf file to data logger
- Performed steps to make the RFIP-R7 the default data dictionary for all new files created
- Deleted the retired data dictionary from the field unit
- Activated the **"Repeat"** and **"Log Later"** functions